


Installation Instruction

Step 1: Install the plug on the side of the pump



Step 2: Remove the protector cap

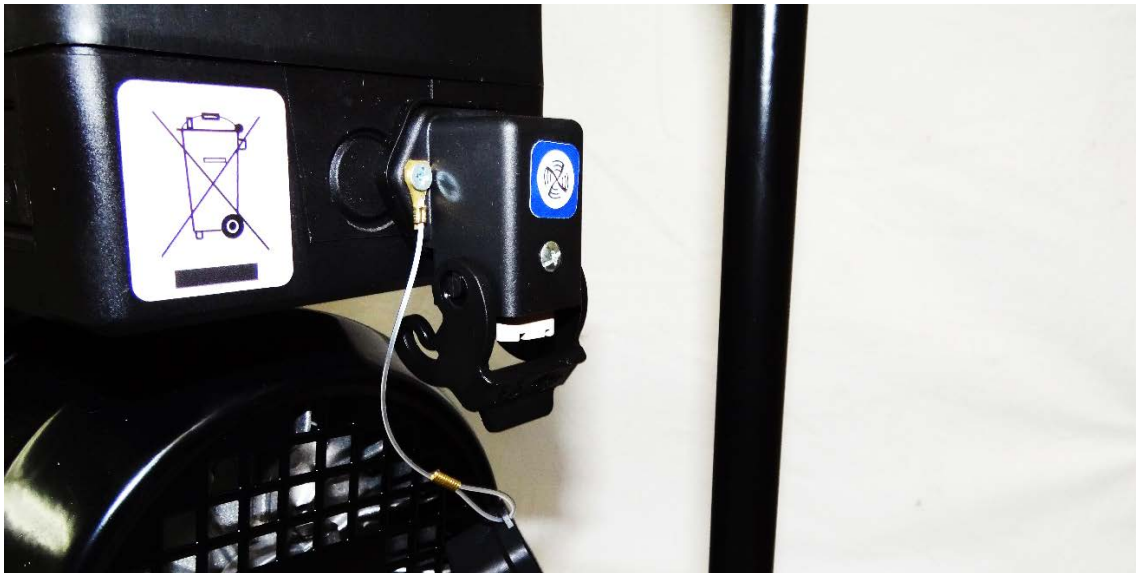


Step 3: Plug 110V adapter in and lock it



Step 4: Activate fan control

To use fans through unit's board socket, it is necessary to enable its functioning. Go to the main screen and press the button "ENTER" several times until the display show the fan program like below.

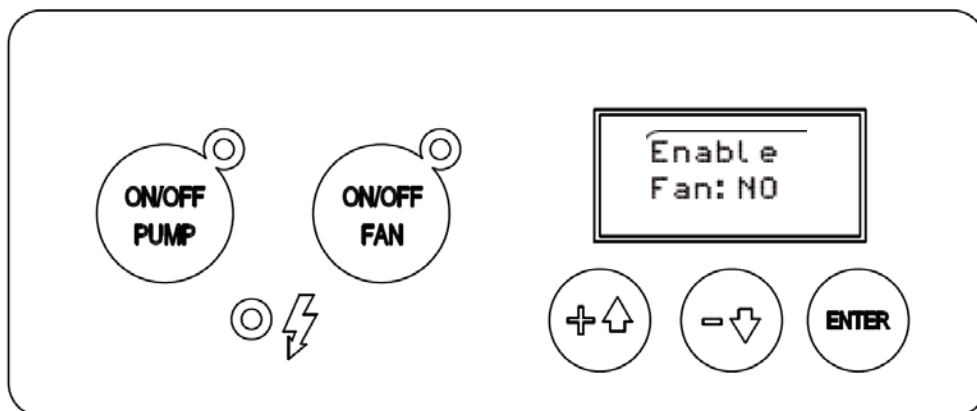

Use up/down buttons to switch to "Yes" and press "ENTER" to confirm. Turn off then restart pump for changes to take effect.

For more detailed information please refer to user manual page 20 -26.